


OPEN  
CIRCUIT

$Z = ?$

NAME	TITLE	DWG. NO.
SMITH CHART	Courtesy of Microwaves101.com	DATE

NORMALIZED IMPEDANCE AND ADMITTANCE COORDINATES

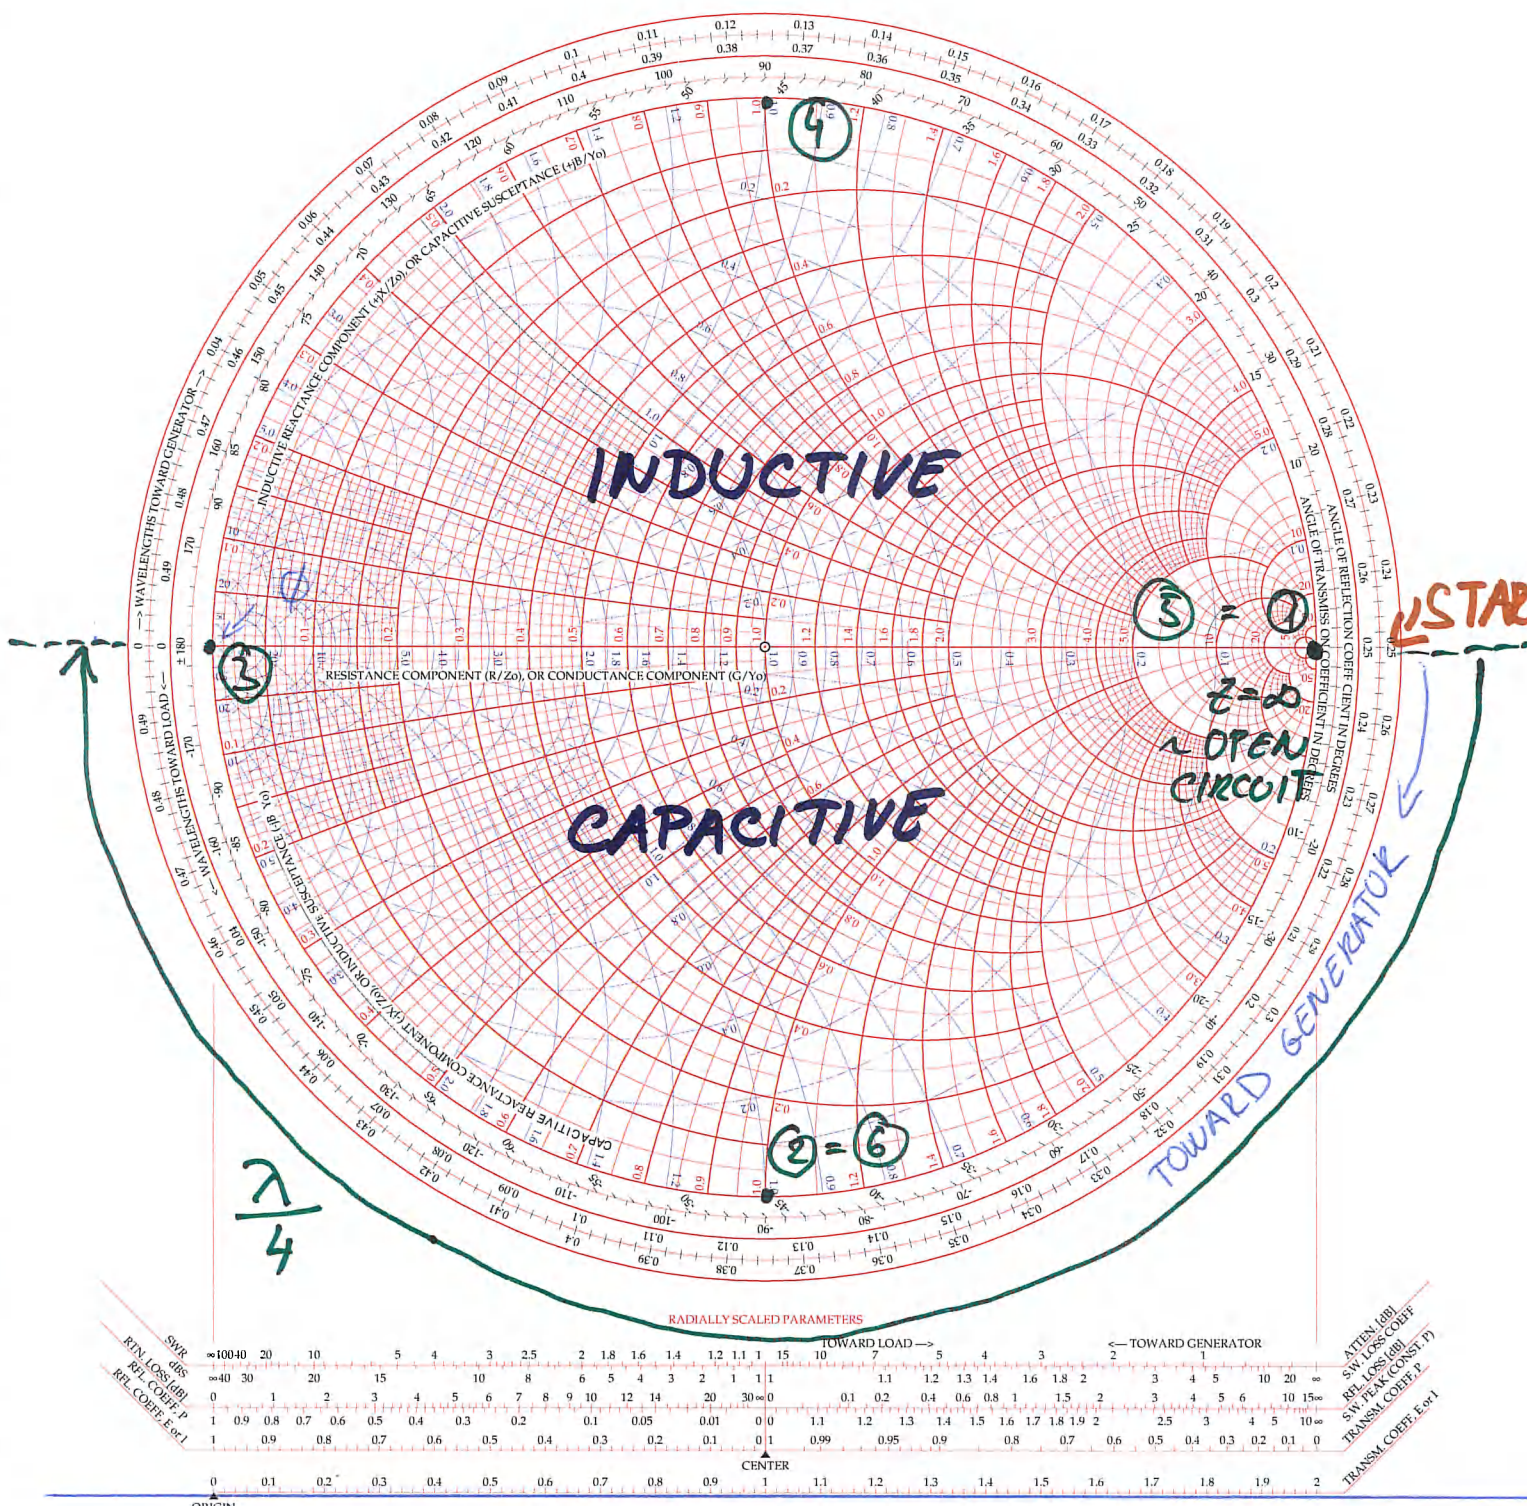

$Z_1 = \infty$     $Z_2 = 0 - j$     $Z_3 = 0$     $Z_4 = 0 + j$     $Z_5 = \infty$     $Z_6 = 0 - j$